



# Put short ones in Front

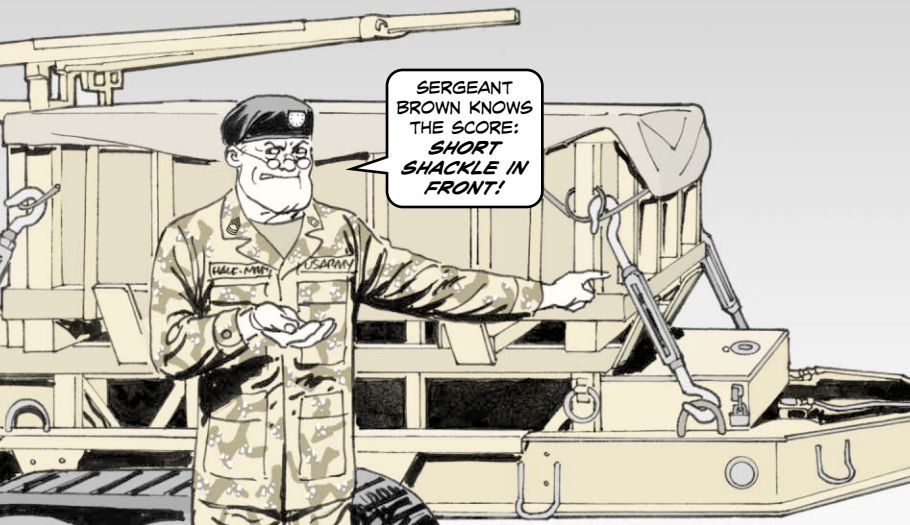

Dear Editor,

There are two turnbuckles that are used with the MICLIC trailer: one has long screws and short shackles and the other has short screws and long shackles.

It does make a difference which turnbuckle you put where. If you put the longer shackles on the front of the tub, you'll have trouble tightening them because the tub gets in the way. Use the short shackles, NSN 5340-01-248-7962, on the front and there's no problem. The longer shackles, NSN 5340-01-249-0589, work fine on the rear of the trailer.

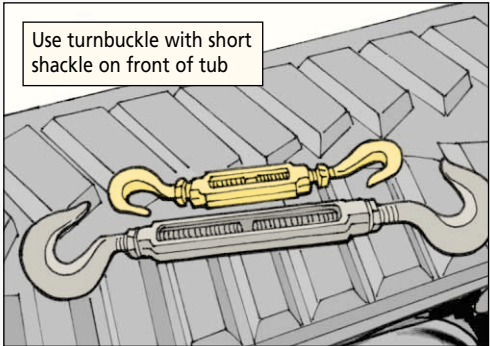

Use turnbuckle with short shackle on front of tub

SSG Mason Brown  
B Co, 40th Engr Bn  
Baumholder, Germany

